

S&C IntelliTeam® Automatic Restoration System

DNP POINTS LIST AND IMPLEMENTATION

DNP points and DNP implementation for: **5801 Universal Control with USBD2A1X Rev 2.31 and USBD2A3X Rev 2.31 or 5802 Universal Control with UDSD2A1X Rev 2.20.**

DNP Points List (5801)

Use software USBD2A1X Rev. 2.31, USBD2A3X Rev. 2.31. For accessing the Model 5801 Universal with IntelliTeam, the DNP master station should define the Switch Control with the following I/O:

	<u>Point Count</u>
Status Points	49
Analog Inputs	17
Analog Outputs	5
Binary Counter	1
Frozen Counter	1
Control Outputs	8

The points are defined in the tables below. Unless otherwise noted, each bit is set if the condition is logically true or active.





Status Points

Status Point # Definition

- 0 Switch Open contact status. This bit is set if the switch (circuit) is open.
- 1 Switch Closed contact status. This bit is set if the switch (circuit) is closed.
- 2 Battery status/switch disabled. This bit is set when switch operation is disabled. This point will be active if the low-pressure condition is true or if the battery is low.
- 3 This bit is set if the low-pressure condition is true. This will also cause the Switch Disabled point (#2 above) to become active as well.
- 4 Automatic operation enabled. This bit is set if automatic control functions have been enabled via either the faceplate switches or SCADA control command.
- 5 **REMOTE/LOCAL** faceplate switch position. This bit is set when the switch is in the **REMOTE** position. In the **REMOTE** position, local operation of the switch from the faceplate is blocked. In the **LOCAL** position, operation of the switch from the SCADA master station is blocked.
- 6 Overcurrent fault detected. This bit is set if the fault detection circuitry has detected a line fault condition which has not been reset by the SCADA operator. For a normally closed switch, line fault conditions clear automatically once 3-phase line voltage has been sensed, the switch is closed, and 45 minutes have elapsed or the faceplate **REMOTE/LOCAL** switch is toggled. For the normally open switch, you can toggle the **REMOTE/LOCAL** switch to clear the condition while the line switch is open or closed.

NOTE: If the conditions above are met and you reinitialize the Switch Control using the Setup software or a SCADA operator command, the fault condition also clears.
- 7 Sectionalizer tripped. This bit is set if any automatic control function has opened the switch. The bit is cleared when the switch is closed for any reason, and is also cleared on reinitialization of the Switch Control using the Setup software, or is cleared when you toggle the **REMOTE/LOCAL** switch.
- 8 Battery maintenance is required. Unless the Switch Control is operating or has recently been operating on battery power, this bit indicates that maintenance is required (probably battery replacement).



**Status
Point # Definition**

- 9 Maintenance required. This bit is set when some form of maintenance (other than battery replacement) is required. It is set when the battery charger has failed due to over voltage, when the switch `Open/Close` contacts are not mutually exclusive, or when the team of Controls cannot operate as a team. This is a summary bit. The exact cause of the failure can be determined from the inspection of other status points.
- 10 `Open/Close` switch position indication is inconsistent. This bit is set if either both contacts are closed, or both contacts are open.
- 11 Control power failure. This bit is set if ac control power is available to the battery charger. It indicates that the Switch Control is operating on battery backup.
- 12 Operator failure override set. This bit is set after the operator has executed the `Failure Override Latch On` control command to let the switch be operated even if battery is bad. The bit remains set until the override is disabled using the `Failure Override Latch Off` command. Also, the status point will go off, and `Failure Override` will become disabled, after a 15 minute timeout, if it was not already turned off by the `Latch Off` command.
- 13 Battery system low. The battery voltage is low, but the switch will operate.
- 14 Battery system bad. The battery voltage is too low to operate the switch. This condition blocks the operation of the switch unless the `Failure Override` bit is set. The “bad” battery status is only set when the battery voltage is definitely too low to operate the switch.
- 15 Battery charger has failed. The charging voltage applied to the battery system was too high when the charger was connected, and the charger has been turned off.
- 16 Battery test in progress. The Switch Control automatically performs a test procedure on the batteries at periodic intervals. During the test, the battery voltage fluctuates.
- 17 Cabinet door open. This bit is set if the door to the Switch Control enclosure is ajar. When the door is closed, this bit is cleared and all power to the faceplate LEDs is turned off.
- 18 Temperature sensor bad. The temperature sensor in the Switch Control is reading out of range. When the sensor is reading incorrectly, various temperature-related correction factors will not be accurate.



**Status
Point # Definition**

- 19 Phase A - overcurrent fault. This bit is set if the peak current measured on Phase A has exceeded the programmed threshold level continuously for at least the programmed period of time. For a normally closed switch, the bit is cleared automatically once ac power has been restored to all phases, the switch is closed, and 45 minutes have elapsed or the faceplate **REMOTE/LOCAL** switch is toggled. For the normally open switch, you can toggle the **REMOTE/LOCAL** switch to clear the condition while the line switch is open or closed.
- NOTE: If the conditions above are met and you reinitialize the Switch Control using the Setup software or a SCADA operator command, the fault condition also clears.
- 20 Phase B - overcurrent fault. As above, for Phase B.
- 21 Phase C - overcurrent fault. As above, for Phase C.
- 22 Overcurrent ground fault. As above, for ground.
- 23 This point is set for any configured voltage channel where the voltage sensor shows a loss of voltage. For example, a Scada-Mate may be configured with either one, three, or six voltage sensors.
- 24 Phase A - current direction. This bit is set if the current on Phase A is flowing in the direction opposite to the “normal” direction configured in the Switch Control. The Switch Control identifies reverse current when the voltage-current phase angle deviates more than 90 degrees from the value set during installation for unity power factor.
- 25 Phase B - current direction. As above, for Phase B.
- 26 Phase C - current direction. As above, for Phase C.
- 27 Application layer confirmation requests. This bit is set when requests for application layer confirmations by the Switch Control are enabled. If enabled, the Switch Control requests a confirmation of receipt from the master station for every application data response generated. If the Switch Control does not receive a confirmation within the “Time Delay Between Attempts,” it issues another data response with request for confirmation. The “Number of Confirmation Attempts” setpoint determines the maximum number of times the Switch Control will reissue a request if it does not receive a confirmation.
- 28 Data Link layer confirmation requests. Similar to the above, this bit is set when requests for data link layer confirmations by the Switch Control are enabled.



**Status
Point # Definition**

- 29 Automatic Transfer event status. This bit is set when a transfer operation is in progress.
 - 30 Return to Normal event status. This bit is set when a return to normal operation is in progress.
 - 31 Team mode enabled. This bit is set when the “Features Enabled” field for this team of Switch Controls includes automatic team operation mode.
 - 32 Removed from team. This bit is set when the local Switch Control is not an active member of the team.
 - 33 Clearing stop transfer inhibited. This bit is set when the Switch Control cannot clear a stop transfer.
 - 34 Stop transfer process. This bit is set when the transfer process is stopped.
 - 35 Return to Normal mode mismatch. This bit is set when not all team members are configured with the same Return to Normal mode.
 - 36 Timestamp mismatch. This bit is set when the timestamp is mismatched among team members.
 - 37 Database sequence number mismatch. This bit is set when the database sequence number is mismatched among team members.
 - 38 Stop transfer and communications. This bit is set when the transfer process and communications are stopped.
 - 39 Configuration process. This bit is set when the configuration process is active.
 - 40 Bad address table. This bit is set when the address table is bad.
- NOTE (Points 31 through 38): If there is no record for the local Switch Control in the team database, these status points are not valid.
- 41 Transfer process status. This bit is set when the team is ready to perform an automatic transfer.
 - 42 Synchronization. This bit is set when the team is synchronized in database sequence number and time.
 - 43 Stop transfer summary. This bit is set when any Switch Control in the team is in a stop transfer condition.
 - 44 Stop transfer and communications summary. This bit is set when any Switch Control in the team is in a stop transfer and communications condition.



Status

Point # Definition

- 45 Address table summary. This bit is set when any Switch Control in the team has a bad address table.
- 46 Configuration process summary. This bit is set when any Switch Control in the team is actively in a configuration process.
- 47 Local record status. This bit is set when no record is found corresponding to the local Switch Control.
- 48 Return to Normal mode summary. This bit is set when not all Switch Controls in the team are in the same Return to Normal mode.



Analog Input Points

Analog Input Point #

Definition

- | | |
|----|---|
| 0 | 90% voltage reference standard. This is provided for the benefit of the protocol implementation to conform to the RTU standard. It is loaded as a constant. |
| 1 | 0% voltage reference standard. This is provided for the benefit of the protocol implementation to conform to the RTU standard. It is loaded as a constant with the value zero. |
| 2 | Neutral current, taken as the vector sum of the phase currents on Phases A, B, and C. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere. |
| 3 | Single-phase current measured on Phase A. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere. |
| 4 | Single-phase current measured on Phase B. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere. |
| 5 | Single-phase current measured on Phase C. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere. |
| 6 | Single-phase voltage measured on Phase A. Voltage is measured using true RMS techniques and scaled to yield a nominal value of 120 Vac. Configuration of the Switch Control at installation time provides the scaling factors such as voltage transformer turn ratio, etc. In cases where loads are connected in a delta (phase-to-phase) configuration, the Switch Control's Sensor Conditioning module is jumpered to yield phase-to-phase voltage readings. Voltage is reported in units of 1 sensor count equals 0.1 Vac RMS. |
| 7 | Single-phase voltage measured on Phase B. As above, for Phase B. |
| 8 | Single-phase voltage measured on Phase C. As above, for Phase C. |
| 9 | Phase angle on Phase A. Each count equals one eighth of a degree. |
| 10 | Phase angle on Phase B. As above, for Phase B. |
| 11 | Phase angle on Phase C. As above, for Phase C. |
| 12 | Single-phase kVARs measured on Phase A. kVARs (volt-amperes, reactive) are calculated from single-phase true RMS voltage and current sensor values and the respective voltage-current phase angle. Each count equals one kVAR. |
| 13 | Single-phase kVARs measured on Phase B. As above, for Phase B. |



**Analog
Input
Point #**

Definition

- | | |
|----|--|
| 14 | Single-phase kVARs measured on Phase C. As above, for Phase C. |
| 15 | The most recent cabinet temperature reading. This value is in units of °F. |
| 16 | Battery voltage, nominally 24 Vdc. If ac power is on, this value is updated only during battery testing. If ac power is off, this value is continuously updated. One count equals 0.035 Vdc. |



Analog Output Points

Analog Output Point

Definition

- 0 Application layer confirmation retry time. This is the length of time the Switch Control waits for an application layer confirmation on a response message before resending the response. It uses “timer byte format.” The retry time is only in effect when the confirmation process is enabled.

NOTE: In “timer byte format,” the top two bits are the time units (0 = tenths of seconds, 1 (\$40) = seconds, 2 (\$80) = minutes, 3 (\$C0) = hours). The bottom 6 bits are the count. A value of 1 second (\$41) can be more accurately specified as 10 tenths (\$0A). A value of 1 minute (\$81) can be specified as 60 seconds (\$7C). A value of 1 hour (\$C1) can be specified as 60 minutes (\$BC). The value \$FF generates an “infinite” time value.

- 1 Application layer confirmation retry count. This is the number of times the Switch Control sends a response message without receiving a confirmation. This number includes the initial response. The retry count is only in effect when the confirmation process is enabled.
- 2 Control point select time. During a **Select-Before-Operate** procedure, this is the length of time that may elapse between receiving the **Select** function for a point and receiving the **Operate** function for that same point. If an **Operate** is not received within this time period, the point is deselected and another **Select** is required before the point will operate. It uses “timer byte format.”
- 3 Real-time load on right feeder.
- 4 Real-time load on left feeder.

NOTE: A DNP device with real-time feeder loading data can use these analog output points to inform the Switch Controls in a team of the real-time loading at both sources for the team. The team can then use this real-time loading data to determine more accurately whether transferring load can be accomplished safely. See the associated setpoints on the second *SETUP: Automatic Operation* screen.



Binary Counter Points

Binary Counter Point #	Definition
0	Operation Counter. This is the number of switch operations. The counter is incremented on each Close operation. This is a 16-bit counter and will overflow back to zero at 65,535.

Frozen Counter Points

Frozen Counter Point #	Definition
0	Frozen Operation Counter. This is the number of switch operations before the operation counter received a Freeze command.

Control Points

Control Point #	Definition
0	Issue the Close/Open command to the switch. The Close/Open command may be issued using either the Select/Operate sequence, the Direct Operate function, or the Direct Operate without Ack function. Both Trip and Close are valid for this point.
1	Issue the Shots-to-Lockout command to the switch. This command may be issued using either the Select/Operate sequence, the Direct Operate function, or the Direct Operate without Ack function. Only a Close command is valid for this point. This command is ignored and returns an error if the switch is not open, or automatic operation is not enabled.

NOTE (Points 0 and 1): These commands are ignored and return an error if a bad battery condition is active and the **Failure Override** command has not been issued, or if a low pressure condition is active. These commands are ignored if the **REMOTE/LOCAL** switch is not in the **REMOTE** position.



Control Point #	Definition
2	Reset (clear) any outstanding overcurrent fault conditions present. This command must be issued using a Pulse On request. The fault condition otherwise remains active for 45 minutes after the switch is closed and ac power is fully restored, or until the REMOTE/LOCAL switch is toggled.
3	Begin a battery test cycle. This command must be issued using a Pulse On request. If ac power is on, the charger is disconnected for several minutes while the test is in progress. If ac power is off, a brief battery impedance test evaluates the battery condition.
4	Enable or disable the Failure Override status. This command must be issued using the Latch On/Off request in the control relay output block. This allows Open and Close commands to be processed even if the switch “Not Ready” condition is active.
5	Enable or disable “Automatic” operation. This command must be issued using the Latch On/Off request in the control relay output block. In “Automatic” mode, the Switch Control automatically opens the switch if a preconfigured recloser sequence is recognized after a detected fault. NOTE: Automatic operation is not disabled by the faceplate REMOTE/LOCAL switch being in the LOCAL position.
6	Enable or disable application layer confirmations. This command must be issued using the Latch On/Off request in the control relay output block. When enabled, the Switch Control requests a confirmation from the master station for every response message generated.
7	Enable or disable data link layer confirmations. This command must be issued using the Latch On/Off request in the control relay output block. When enabled, the Switch Control uses “confirmed user data” packets for all messages originated by the Switch Control.



DNP Points List (5802)

Use software UDSD2A1X Rev. 2.20. For accessing the Model 5802 with IntelliTeam, the DNP master station should define the Switch Control with the following I/O:

	<u>Point Count</u>
Status Points	64
Analog Inputs	30
Analog Outputs	4
Binary Counter	2
Frozen Counter	2
Control Outputs	10

The points are defined in the tables below. Unless otherwise noted, each bit is set if the condition is logically true or active. Status Points

***Status
Point # Definition***

- 0 Switch 1 Open contact status. This bit is set if the switch (circuit) is open.
- 1 Switch 1 Closed contact status. This bit is set if the switch (circuit) is closed.
- 2 Vacuum Fault Interrupter 1 Closed contact status. This bit is set if the first Vacuum Fault Interrupter is closed (if applicable).
- 3 Switch 2 Open contact status. This bit is set if the switch (circuit) is open.
- 4 Switch 2 Closed contact status. This bit is set if the switch (circuit) is closed.
- 5 Vacuum Fault Interrupter 2 Closed contact status. This bit is set if the second Vacuum Fault Interrupter is closed (if applicable).
- 6 Automatic operation enable. This bit is set if automatic control functions have been enabled via either the faceplate switches or SCADA control command.
- 7 **REMOTE/LOCAL** faceplate switch position. This bit is set when the switch is in the **REMOTE** position. In the **REMOTE** position, local operation of the switch from the faceplate is blocked. In the **LOCAL** position, operation of the switch from the SCADA master station is blocked.



**Status
Point # Definition**

- 8 Overcurrent fault detected, Switch 1 or Switch 2. This bit is set if the fault detection circuitry has detected a line fault condition which has not been reset by the SCADA operator. For a normally closed switch, line fault conditions clear automatically once 3-phase line voltage has been sensed, the switch is closed, and 45 minutes have elapsed or the faceplate **REMOTE/LOCAL** switch is toggled. For the normally open switch, you can toggle the **REMOTE/LOCAL** switch to clear the condition while the line switch is open or closed.
- NOTE: If the conditions above are met and you reinitialize the Switch Control using the Setup software or a SCADA operator command, the fault condition also clears.
- 9 Sectionalizer tripped, Switch 1. This bit is set if any automatic control function has opened the switch. The bit is cleared when the switch is closed for any reason, and is also cleared on reinitialization of the Switch Control using the Setup software.
- 10 Sectionalizer tripped, Switch 2. As above, for Switch 2.
- 11 Reserved.
- 12 Switch 1 disabled. This bit is set when switch operation is disabled. This may occur when low pressure is detected, external local is set, or when battery system bad is present. See status points 14, 15, and 22 to determine which condition is causing the bit to be set.
- 13 Switch 2 disabled. As above, for Switch 2.
- 14 Low Pressure / Low Oil detected (if applicable).
- 15 Operator is in external local operation (if applicable).
- 16 Maintenance is required. This bit is set when some form of maintenance (other than battery replacement) is required. It is set when the battery charger has failed due to over voltage, when the switch **Open/Close** contacts are not mutually exclusive, or when the team of Controls cannot operate as a team. This is a summary bit. The exact cause of the failure can be determined from the inspection of other status points.
- 17 **Open/Close** switch position indication is inconsistent, Switch 1. This bit is set if either both contacts are closed, or both contacts are open.



Status Point #	Definition
18	Open/Close switch position indication is inconsistent, Switch 2. This bit is set if either both contacts are closed, or both contacts are open.
19	Control power failure. This bit is set if ac power is not available to the battery charger. It indicates that the Switch Control is operating on battery backup.
20	Operator failure override set. This bit is set after the operator has executed the Failure Override Latch On control command to let the switch be operated even if battery power is low. The bit remains set until the override is disabled using the Failure Override Latch Off command.
21	Battery system low. The battery voltage is too low to operate the switch reliably.
22	Battery system bad. The battery voltage is too low to operate the switch. This condition blocks the operation of the switch unless the Failure Override bit is set. The “bad” battery status is only set when the battery voltage is definitely too low to operate the switch.
23	Battery charger has failed. The charging voltage applied to the battery system was too high when the charger was connected, and the charger has been turned off.
24	Battery test in progress. The Switch Control automatically performs a test procedure on the batteries at periodic intervals. During the test, the battery voltage fluctuates.
25	Cabinet door open. This bit is set if the door to the Switch Control enclosure is ajar. When the door is closed, this bit is cleared and all power to the faceplate LEDs is turned off.
26	Temperature sensor bad. The temperature sensor in the Switch Control is reading out of range. When the sensor is reading incorrectly, various temperature-related correction factors will not be accurate.
27	Phase A - overcurrent fault, Switch 1. This bit is set if the peak current measured on Phase A has exceeded the programmed threshold level continuously for at least the programmed period of time. For a normally closed switch, the bit is cleared automatically once ac power has been restored to all phases, the switch is closed, and 45 minutes have elapsed or the faceplate REMOTE/LOCAL switch is toggled. For the normally open switch, you can toggle the REMOTE/LOCAL switch to clear the condition while the line switch is open or closed.



**Status
Point # Definition**

NOTE: If the conditions above are met and you reinitialize the Switch Control using the Setup software or a SCADA operator command, the fault condition also clears.

- 28 Phase B - overcurrent fault, Switch 1. As above, for Phase B, Switch 1.
- 29 Phase C - overcurrent fault, Switch 1. As above, for Phase C, Switch 1.
- 30 Overcurrent ground fault, Switch 1. As above, for ground, Switch 1.
- 31 Phase A - overcurrent fault, Switch 2. This bit is set if the peak current measured on Phase A has exceeded the programmed threshold level continuously for at least the programmed period of time. For a normally closed switch, the bit is cleared automatically once ac power has been restored to all phases, the switch is closed, and 45 minutes have elapsed or the faceplate **REMOTE/LOCAL** switch is toggled. For the normally open switch, you can toggle the **REMOTE/LOCAL** switch to clear the condition while the line switch is open or closed.

NOTE: If the conditions above are met and you reinitialize the Switch Control using the Setup software or a SCADA operator command, the fault condition also clears.

- 32 Phase B - overcurrent fault, Switch 2. As above, for Phase B, Switch 2.
- 33 Phase C - overcurrent fault, Switch 2. As above, for Phase C, Switch 2.
- 34 Overcurrent ground fault, Switch 2. As above, for ground, Switch 2.
- 35 This point is set for any configured voltage channel where the voltage sensor shows a loss of voltage. For example, pad-mounted gear may be configured with three voltage sensors or six voltage sensors.
- 36 Phase A - current direction, Switch 1. This bit is set if the current on Phase A is flowing in the direction opposite to the “normal” direction configured in the Switch Control. The Switch Control identifies reverse current when the voltage-current phase angle deviates more than 90 degrees from the value set during installation for unity power factor.
- 37 Phase B - current direction, Switch 1. As above, for Phase B, Switch 1.
- 38 Phase C - current direction, Switch 1. As above, for Phase C, Switch 1.
- 39 Phase A - current direction, Switch 2. This bit is set if the current on Phase A is flowing in the direction opposite to the “normal” direction configured in the Switch Control. The Switch Control identifies reverse current when the voltage-current phase angle deviates more than 90 degrees from the value set during installation for unity power factor.



**Status
Point # Definition**

- 40 Phase B - current direction, Switch 2. As above, for Phase B, Switch 2.
- 41 Phase C - current direction, Switch 2. As above, for Phase C, Switch 2.
- 42 Application layer confirmation requests. This bit is set when requests for application layer confirmations by the Switch Control are enabled. If enabled, the Switch Control requests a confirmation of receipt from the master station for every application data response generated. If the Switch Control does not receive a confirmation within the “Time Delay Between Attempts,” it issues another data response with request for confirmation. The “Number of Confirmation Attempts” setpoint determines the maximum number of times the Switch Control will reissue a request if it does not receive a confirmation.
- 43 Data Link layer confirmation requests. This bit is set when requests for data link layer confirmations by the Switch Control are enabled. If enabled, the Switch Control requests a confirmation of receipt from the destination station for every data link request generated.
- NOTE: Data link layer confirmations only apply to requests that are generated by the Switch Control to other peer Switch Controls (IntelliTeam).
- 44 Automatic Transfer event status. This bit is set when a transfer operation is in progress.
- 45 Return to Normal event status. This bit is set when a return to normal operation is in progress.
- 46 Team mode enabled. This bit is set when the “Features Enabled” field for this team of Switch Controls includes automatic team operation mode.
- 47 Removed from team. This bit is set when the local Switch Control is not an active member of the team.
- 48 Clearing stop transfer inhibited. This bit is set when the Switch Control cannot clear a stop transfer.
- 49 Stop transfer process. This bit is set when the transfer process is stopped.
- 50 Return to Normal mode mismatch. This bit is set when not all team members are configured with the same Return to Normal mode.
- 51 Timestamp mismatch. This bit is set when the timestamp is mismatched among team members.
- 52 Database sequence number mismatch. This bit is set when the database sequence number is mismatched among team members.



Status

Point # Definition

53 Stop transfer and communications. This bit is set when the transfer process and communications are stopped.

54 Configuration process. This bit is set when the configuration process is active.

55 Bad address table. This bit is set when the address table is bad.

NOTE (Points 49 through 56): If there is no record for the local Switch Control in the team database, these status points are not valid.

56 Transfer process status. This bit is set when the team is ready to perform an automatic transfer.

57 Synchronization. This bit is set when the team is synchronized in database sequence number and time.

58 Stop transfer summary. This bit is set when any Switch Control in the team is in a stop transfer condition.

59 Stop transfer and communications summary. This bit is set when any Switch Control in the team is in a stop transfer and communications condition.

60 Address table summary. This bit is set when any Switch Control in the team has a bad address table.

61 Configuration process summary. This bit is set when any Switch Control in the team is actively in a configuration process.

62 Local record status. This bit is set when no record is found corresponding to the local Switch Control.

63 Return to Normal mode summary. This bit is set when not all Switch Controls in the team are in the same Return to Normal mode.



Analog Input Points

Analog Input Point #	Definition
0	90% voltage reference standard. This is provided for the benefit of the protocol implementation to conform to the RTU standard. It is loaded as a constant.
1	0% voltage reference standard. This is provided for the benefit of the protocol implementation to conform to the RTU standard. It is loaded as a constant with the value zero.
2	Neutral current of Switch 1, taken as the vector sum of the phase currents on Phases A, B, and C of Switch 1. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
3	Single-phase current measured on Phase A of Switch 1. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
4	Single-phase current measured on Phase B of Switch 1. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
5	Single-phase current measured on Phase C of Switch 1. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
6	Neutral current of Switch 2, taken as the vector sum of the phase currents on Phases A, B, and C of Switch 2. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
7	Single-phase current measured on Phase A of Switch 2. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
8	Single-phase current measured on Phase B of Switch 2. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
9	Single-phase current measured on Phase C of Switch 2. Current is measured using true RMS techniques and reported in units of 1 count equals 1 ampere.
10	Single-phase voltage measured on Phase A of Switch 1. Voltage is measured using true RMS techniques and scaled to yield a nominal value of 120 Vac. Configuration of the Switch Control at installation time provides the scaling factors such as voltage transformer turn ration, etc. In cases where loads are connected in a delta (phase-to-phase) configuration, the Switch Control's Sensor Conditioning module is jumpered to yield phase-to-phase voltage readings. Voltage is reported in units of 1 sensor count equals 0.1 Vac RMS.



**Analog
Input
Point #**

Definition

- 11 Single-phase voltage measured on Phase B of Switch 1. As above, for Phase B, Switch 1.
- 12 Single-phase voltage measured on Phase C of Switch 1. As above, for Phase C, Switch 1.
- 13 Single-phase voltage measured on Phase A of Switch 2. Voltage is measured using true RMS techniques and scaled to yield a nominal value of 120 Vac. Configuration of the Switch Control at installation time provides the scaling factors such as voltage transformer turn ratio, etc. In cases where loads are connected in a delta (phase-to-phase) configuration, the Switch Control's Sensor Conditioning module is jumpered to yield phase-to-phase voltage readings. Voltage is reported in units of 1 sensor count equals 0.1 Vac RMS.
- 14 Single-phase voltage measured on Phase B of Switch 2. As above, for Phase B, Switch 2.
- 15 Single-phase voltage measured on Phase C of Switch 2. As above, for Phase C, Switch 2.
- 16 Phase angle on Phase A of Switch 1. Each count equals one eighth of a degree.
- 17 Phase angle on Phase B of Switch 1. As above, for Phase B, Switch 1.
- 18 Phase angle on Phase C of Switch 1. As above, for Phase C, Switch 1.
- 19 Phase angle on Phase A of Switch 2. Each count equals one eighth of a degree.
- 20 Phase angle on Phase B of Switch 2. As above, for Phase B, Switch 2.
- 21 Phase angle on Phase C of Switch 2. As above, for Phase C, Switch 2.
- 22 Single-phase kVARs measured on Phase A of Switch 1. kVARs (volt-amperes, reactive) are calculated from single-phase true RMS voltage and current sensor values and the respective voltage-current phase angle. Each count equals one kVAR.
- 23 Single-phase kVARs measured on Phase B of Switch 1. As above, for Phase B, Switch 1.
- 24 Single-phase kVARs measured on Phase C of Switch 1. As above, for Phase C, Switch 1.



**Analog
Input
Point #**

Definition

- 25 Single-phase kVARs measured on Phase A of Switch 2. kVARs (volt-amperes, reactive) are calculated from single-phase true RMS voltage and current sensor values and the respective voltage-current phase angle. Each count equals 1 kVAR.
- 26 Single-phase kVARs measured on Phase B of Switch 2. As above, for Phase B, Switch 2.
- 27 Single-phase kVARs measured on Phase C of Switch 2. As above, for Phase C, Switch 2.
- 28 The most recent cabinet temperature reading. This value is in units of °F.
- 29 Battery voltage, nominally 24 Vdc. If ac power is on, this value is updated only during battery testing. If ac power is off, this value is continuously updated. One count equals 0.035 Vdc.

Analog Output Points

**Analog
Output
Point #**

Definition

- 0 Application layer confirmation retry time. This is the length of time the Switch Control waits for an application layer confirmation on a response message before resending the response. It uses “timer byte format.” The retry time is only in effect when the confirmation process is enabled.

NOTE: In “timer byte format,” the top two bits are the time units (0 = tenths of seconds, 1 (\$40) = seconds, 2 (\$80) = minutes, 3 (\$C0) = hours). The bottom 6 bits are the count. A value of 1 second (\$41) can be more accurately specified as 10 tenths (\$0A). A value of 1 minute (\$81) can be specified as 60 seconds (\$7C). A value of 1 hour (\$C1) can be specified as 60 minutes (\$BC). The value \$FF generates an “infinite” time value.

- 1 Application layer confirmation retry count. This is the number of times the Switch Control sends a response message without receiving a confirmation. This number includes the initial response. The retry count is only in effect when the confirmation process is enabled.



**Analog
Output
Point # Definition**

2 Control point select time. During a **Select-Before-Operate** procedure, this is the length of time that may elapse between receiving the **Select** function for a point and receiving the **Operate** function for that same point. If an **Operate** is not received within this time period, the point is deselected and another **Select** is required before the point will operate. It uses “timer byte format.”

3 Real-time load on right feeder.

NOTE: A DNP device with real-time feeder loading data can use these analog output points to inform the Switch Controls in a team of the real-time loading at both sources for the team. The team can then use this real-time loading data to determine more accurately whether transferring load can be accomplished safely. See the associated setpoints on the second *SETUP: Automatic Operation* screen.

Binary Counter Points

**Binary
Counter
Point # Definition**

0 Operation Counter, Switch 1. This is the number of switch operations. The counter is incremented on each **Close** operation. This is a 16-bit counter and will overflow back to zero at 65,535.

1 Operation Counter, Switch 2. This is the number of switch operations. The counter is incremented on each **Close** operation. This is a 16-bit counter and will overflow back to zero at 65,535.

Frozen Counter Points

**Frozen
Counter
Point # Definition**

0 Frozen Operation Counter, Switch 1. This is the number of switch operations before the operation counter received a **Freeze** command.

1 Frozen Operation Counter, Switch 2. This is the number of switch operations before the operation counter received a **Freeze** command.



Control Points

Control Point #	Definition
0	Issue the Close/Open command to Switch 1. The Close/Open command may be issued using either the Select/Operate sequence, the Direct Operate function, or the Direct Operate without Ack function. Both Trip and Close are valid for this point.
1	Issue the Close/Open command to Switch 2. As above, for Switch 2.
2	Issue the Shots-to-Lockout command to Switch 1. This command may be issued using either the Select/Operate sequence, the Direct Operate function, or the Direct Operate without Ack function. Only a Close command is valid for this point. This command is ignored and returns an error if the switch is not open, or automatic operation is not enabled.
3	Issue the Shots-to-Lockout command to Switch 2. This command may be issued using either the Select/Operate sequence, the Direct Operate function, or the Direct Operate without Ack function. Only a Close command is valid for this point. This command is ignored and returns an error if the switch is not open, or automatic operation is not enabled.
	NOTE (Points 0 - 3): These commands are ignored and return an error if a bad battery condition is active and the Failure Override command has not been issued, or if a low pressure condition is active on the switch to be operated. These commands are ignored if the faceplate REMOTE/LOCAL switch is not in the REMOTE position.
4	Reset (clear) any outstanding overcurrent fault conditions present. This command must be issued using a Pulse On request. The fault condition otherwise remains active for 45 minutes after the switch is closed and ac power is fully restored, or until the REMOTE/LOCAL switch is toggled.
5	Begin a battery test cycle. This command must be issued using a Pulse On request. If ac power is on, the charger is disconnected for several minutes while the test is in progress. If ac power is off, a brief battery impedance test evaluates the battery condition.



Control Point #	Definition
6	Enable or disable the Failure Override status. This command must be issued using the Latch On/Off request in the control relay output block. This allows Open and Close commands to be processed even if the switch “Not Ready” condition is active.
7	Enable or disable “Automatic” operation. This command must be issued using the Latch On/Off request in the control relay output block. In “Automatic” mode, the Switch Control automatically opens the switch if a preconfigured recloser sequence is recognized after a detected fault. NOTE: Automatic operation is not disabled by the faceplate REMOTE/LOCAL switch being in the LOCAL position.
8	Enable or disable application layer confirmations. This command must be issued using the Latch On/Off request in the control relay output block. When enabled, the Switch Control requests a confirmation from the master station for every response message generated.
9	Enable or disable data link layer confirmations. This command must be issued using the Latch On/Off request in the control relay output block. When enabled, the Switch Control uses “confirmed user data” packets for all messages originated by the Switch Control.



DNP Implementation

This implementation of DNP and this section of documentation conform to the document *DNP V3.00 Subset Definitions*, Version 0.01, available from the DNP Users Group.

Device Profile Description

This section describes the compatibility of S&C Electric Company's implementation of DNP with other devices.

DNP V3.00 DEVICE PROFILE DOCUMENT	
Vendor Name: S&C Electric Company	
Device Name: 5801 Series IntelliTeam Automatic Switch Control	
Highest DNP Level Supported: For Requests - Level 2 For Responses - Level 2	Device Function: <input checked="" type="checkbox"/> _ Master <input checked="" type="checkbox"/> _ Slave
Notable objects, functions, and/or qualifiers supported in addition to the Highest DNP Levels Supported (the complete list is described in the attached table): 8-Bit Unsigned Integers _____ _____ _____ _____	
Maximum Data Link Frame Size (bytes) Transmitted - 292 Received - 292	Max Application Fragment Size (bytes) Transmitted - 249 Received - 249
Maximum Data link Re-tries: <input type="checkbox"/> None <input type="checkbox"/> Fixed at _____ <input checked="" type="checkbox"/> Configurable, range 1 to 25	Maximum Application Layer Re-tries <input type="checkbox"/> None <input type="checkbox"/> Fixed at _____ <input checked="" type="checkbox"/> Configurable, range 1 to 25 and infinite



Requires Data Link Layer Confirmation:

- Never
- Always
- Sometimes If 'Sometimes', when? - When requested by the Master
- Configurable If 'Configurable', how? - Data link confirmations are configured through SCADA communications or through locally connected setup software.

Requires Application Layer Confirmation:

- Never
- Always (not recommended)
- When reporting Event Data (Slave devices only)
- When sending multi-fragment responses (Slave devices only)
- Sometimes If 'Sometimes', when? - When requested by the Master during a request.
- Configurable If 'Configurable', how? - Response confirmations are configured through SCADA communications or through locally connected setup software.

Timeouts while waiting for:

- | | | | | |
|-------------------------|--|--------------------------------|-----------------------------------|--|
| Data Link Confirm | <input type="checkbox"/> None | <input type="checkbox"/> Fixed | <input type="checkbox"/> Variable | <input checked="" type="checkbox"/> Config |
| Complete Appl. Fragment | <input checked="" type="checkbox"/> None | <input type="checkbox"/> Fixed | <input type="checkbox"/> Variable | <input type="checkbox"/> Config |
| Application Confirm | <input type="checkbox"/> None | <input type="checkbox"/> Fixed | <input type="checkbox"/> Variable | <input checked="" type="checkbox"/> Config |
| Complete Appl. Response | <input checked="" type="checkbox"/> None | <input type="checkbox"/> Fixed | <input type="checkbox"/> Variable | <input type="checkbox"/> Config |
- Others _____
Attach explanation if 'Variable' or 'Configurable' was checked
(see Note 1 below for explanation)

Sends/Executes Control Operations:

- | | | | | |
|-------------------------|---|---------------------------------|---|---------------------------------|
| WRITE Binary Outputs | <input checked="" type="checkbox"/> Never | <input type="checkbox"/> Always | <input type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| SELECT/OPERATE | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| DIRECT OPERATE | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| DIRECT OPERATE - NO ACK | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Count > 1 | <input checked="" type="checkbox"/> Never | <input type="checkbox"/> Always | <input type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Pulse On | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Pulse Off | <input checked="" type="checkbox"/> Never | <input type="checkbox"/> Always | <input type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Latch On | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Latch Off | <input type="checkbox"/> Never | <input type="checkbox"/> Always | <input checked="" type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Queue | <input checked="" type="checkbox"/> Never | <input type="checkbox"/> Always | <input type="checkbox"/> Sometimes | <input type="checkbox"/> Config |
| Clear Queue | <input checked="" type="checkbox"/> Never | <input type="checkbox"/> Always | <input type="checkbox"/> Sometimes | <input type="checkbox"/> Config |

Attach explanation if 'Sometimes' or 'Configurable' was checked
(see Note 2 below for explanation)



FILL OUT THE FOLLOWING ITEM FOR MASTER DEVICES ONLY:	
Master Expects Binary Input Change Events: <input type="checkbox"/> Either time-tagged or non-time-tagged for a single event <input type="checkbox"/> Both time-tagged and non-time-tagged for a single event <input type="checkbox"/> Configurable (attach explanation)	
FILL OUT THE FOLLOWING ITEMS FOR SLAVE DEVICES ONLY:	
Reports Binary Input Change Events when no specific variation requested: <input type="checkbox"/> Never <input type="checkbox"/> Only time-tagged <input checked="" type="checkbox"/> Only non-time-tagged <input type="checkbox"/> Configurable to send both	Reports time-tagged Binary Input Change Events when no specific variation requested: <input type="checkbox"/> Never <input checked="" type="checkbox"/> Binary Input Change with Time <input type="checkbox"/> Bin In Change Relative Time <input type="checkbox"/> Configurable (explain)
Sends Unsolicited Responses: <input type="checkbox"/> Never <input checked="" type="checkbox"/> Configurable (explain) <input type="checkbox"/> Only certain objects <input type="checkbox"/> Sometimes (explain) <input type="checkbox"/> ENABLE/DISABLE UNSOLICITED Function codes supported (see Note 3 below)	Sends Static Data in Unsolicited Responses: <input type="checkbox"/> Never <input checked="" type="checkbox"/> When Device Restarts <input checked="" type="checkbox"/> When Status Flags Change No other options are permitted. (see Note 3 below)
Default Counter Object/Variation: <input type="checkbox"/> No Counters Reported <input type="checkbox"/> Configurable (explain) <input checked="" type="checkbox"/> Default Object - 20 Default Variation - 6 <input type="checkbox"/> Point-by-point list attached	Counters Roll Over at: <input type="checkbox"/> No Counters Reported <input type="checkbox"/> Configurable (explain) <input checked="" type="checkbox"/> 16 Bits <input type="checkbox"/> 32 Bits <input type="checkbox"/> Other Value _____ <input type="checkbox"/> Point-by-point list attached
Sends Multi-Fragment Responses (Slave Only): <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	

NOTE 1: Timeouts While Waiting for Confirmations

When a data link confirmation (during a request to reset the transmit link) or an application layer response confirmation is requested, the Switch Control waits before sending another response/confirmation attempt (if the retry number has not been reached), or stopping the confirmation process. Both confirmation requests use the same timeout period (“Time Delay Between Attempts”).

You can set the “Time Delay Between Attempts” with the Setup software or via SCADA. (See the *Setup* chapter for more details.)



NOTE 2: Control Operations Executed

For all Binary Output Relay operations and Analog Output operations, the allowed control functions are:

- 1 Select/Operate
- 1 Direct Operate
- 1 Direct Operate No Ack

The master station can choose which of these three functions to use at any given time.

You must use the `Trip/Close` bits for these functions in the Control Block. Set the `Count` value to “1” and the `Code` value to “NUL” (0) or “1.” The Switch Control ignores the `On-Time` and `Off-Time` values and the `Queue` and `Clear` flags in the Control Code.

For all momentary point operations, you must use the `Pulse On` function. When using `Pulse On`, set the `Count` value in the Control Block to “1” and the `Code` value to “1.” Set the `Trip/Close` to “NUL” (00). The Switch Control ignores the `On-Time` and `Off-Time` values and the `Queue` and `Clear` flags in the Control Code.

For all latching point operations, you can use either the `Latch On` or `Latch Off` function. For either function, set the `Count` value in the Control Block to “1.” Set the `Code` value to “3” for `Latch On` or “4” for `Latch Off`. Set the `Trip/Close` to “NUL” (00). The Switch Control ignores the `On-Time` and `Off-Time` values and the `Queue` and `Clear` flags in the Control Code.

For more details, see the *Control Relay Output Block* section of the document object library in the *DNP V3.00 Basic 4 Document Set*, available from the DNP Users Group.

NOTE 3: Unsolicited Responses

The Switch Control returns unsolicited responses to the configured master station address when a change occurs in any status point or when the device is restarted. For the 2852-SC, object 2, variation 2 (“Binary Input Change with Time”) is returned.

You can enable and disable unsolicited responses from the Setup software or via SCADA (function code 20 to enable, function code 21 to disable).



Implementation Table

This section describes which objects and requests this implementation accepts and which responses are returned. Object, Variation, and Qualifier Codes in the request must exactly match what is expected; otherwise, the Switch Control flags an error. All application layer responses use the standard response function code 129.

OBJECT			REQUEST		RESPONSE
Obj	Var	Description	Func Code (dec)	Qualifier Codes (hex)	Qual Codes (hex)
1	0	Binary Input - All Variations	1	06	
1	1	Binary Input			00
2	0	Binary Input Change - All Variations	1	06,07,08	
2	1	Binary Input Change without Time	1	06,07,08	17
2	2	Binary Input Change with Time (see Note 4)	1	06,07,08	17
2	3	Binary Input Change with Relative Time (object parsed but no data to return)	1	06,07,08	17
10	0	Binary Output - All Variations	1	06	
10	1	Binary Output (object parsed but WRITE not used)	2	17, 28	
10	2	Binary Output Status (only use the on-line bit, see Note 5)			00
12	1	Control Relay Output Block	3,4,5,6	17, 28	echo of request
20	0	Binary Counter - All Variations	1,7,8,9,10	06	
20	6	16-Bit Binary Counter without Flag			00
21	0	Frozen Counter - All Variations	1	06	
21	10	16-Bit Frozen Counter without Flag			00
22	0	Counter Change Event - All Variations (object parsed but no data to return)	1	06,07,08	



OBJECT			REQUEST		RESPONSE
Obj	Var	Description	Func Code (dec)	Qualifier Codes (hex)	Qual Codes (hex)
30	0	Analog Input - All Variations	1	06	
30	4	16-Bit Analog Input without Flag			00
32	0	Analog Change Event - All Variations (object parsed but no data to return)	1	06,07,08	
40	0	Analog Output Status - All Variations	1	06	
40	2	16-Bit Analog Output Status			00
41	2	16-Bit Analog Output Block	3,4,5,6	17, 28	echo of request
50	1	Time and Date	2	07 where quantity =1	IINs only
60	1	Class 0 Data	1	06	
60	2	Class 1 Data	1	06,07,08	
60	3	Class 2 Data (object parsed but no data to return)	1	06,07,08	
60	4	Class 3 Data (object parsed but no data to return)	1	06,07,08	
80	1	Internal Indications	2	00 index=7	IINs only
102	0	8-Bit Unsigned Integer (see Note 6)	1	04	04
102	1	8-Bit Unsigned Integer (see Note 6)	1,2	04	04
No Object			13		
No Object			23		

NOTE 4: Binary Input Change with Time

This is the default object returned in the unsolicited report by exception (if enabled) and the default object for a class 1 data request. Note that the maximum number of records returned in one packet for this object is 29. Returning 29 records will cause 232 bytes of data to be returned; with overhead, this makes almost a full packet. If more than 29 status change records exist, you can retrieve the remaining records with an additional request.



NOTE 5: Binary Output Status

In a response to a Binary Output Status request, the Switch Control returns a status byte for each control point available. In this implementation of the Binary Output Status object, only the On-Line bit is used. All other bits, including the State bit, should be ignored.

You can inspect the state of all digital points (controlled and not controlled) by using the Binary Input object.

NOTE 6: 8-Bit Unsigned Integer

This object provides efficient access to all types of memory-mapped data. All virtual memory locations are addressed using 16-bit absolute address identifiers in the Range field (qualifier code 4), least significant byte (LSB) first.

To perform a write to general memory, make sure that the high bytes of the addresses do not span virtual memory regions or multiple tables, and that the low bytes of the addresses are in ascending order.

NOTE: Switch Controls with IntelliTeam primarily use this object to share specific records or data with each other. It is available for SCADA implementation, but is not required.

NOTE 7: Polling Class

DNP points are assigned to polling classes. S&C Automatic Controls implement only Class 0 and Class 1 polls. The Class 0 poll contains all DNP points for the control that return **static data**, the latest value for all data. The Class 1 poll returns **event data**, any DNP point that has changed since the last event data message was received. Polling frequency is an aspect of the user's SCADA system, and is user selectable.

The Class 2 and 3 polls are user defined lists of DNP points that will be returned when the IED receives a Class 2 or 3 poll. S&C Automatic Controls do not support Class 2 or 3 polling. When received, the Class 2 or 3 poll request is understood, it does not elicit an error response, and the response is just the application header with no objects. The SCADA master station can send a Class 2 or 3 poll to other equipment on the system, and S&C Controls will not return an error.