


STATION VERTICAL-OFFSET STYLE MOUNTINGS

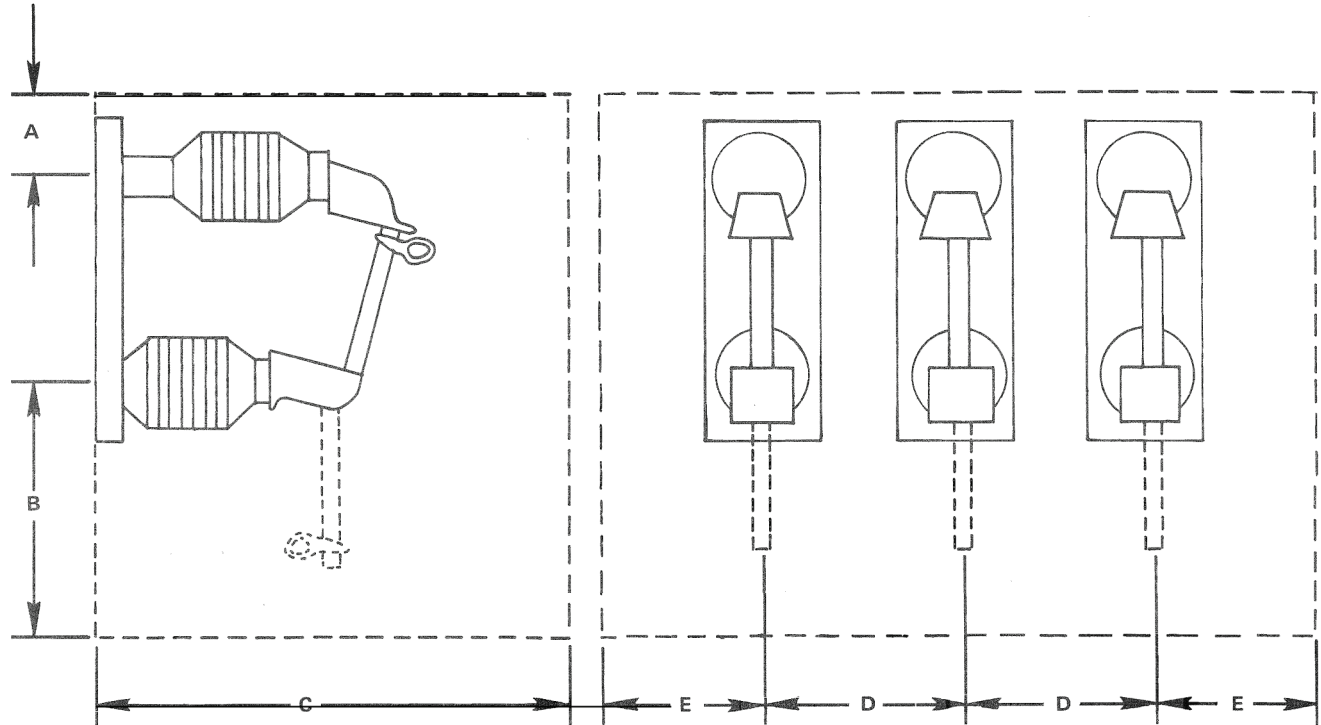

Rating				Mounting Clearances, Inches (mm)						
kV			Amperes, Max	A	B ^①	B ^②	C	D ^③	D ^④	E
Nominal	Max.	BIL								
14.4	17	110	200E or 200K	10½ (267)	26½ (673)	29 (737)	44½ (1130)	17 (432)	19 (483)	14 (356)
25	27	150	200E or 200K	14½ (368)	33½ (851)	37 (940)	53½ (1359)	20 (508)	23 (584)	17 (432)
34.5	38	200	200E or 200K	19 (483)	49½ (1257)	53 (1346)	72½ (1842)	25 (635)	28 (711)	22 (559)

① Clearance to grounded objects when the source is connected to the main-contact end.

② Clearance to other phases or a low-voltage bus when the source is connected to the main-contact end or clearance to grounded objects or other phases when the source is connected to the hinge end.

③ Phase spacing when the source is connected to the main-contact end.

④ Phase spacing when the source is connected to the hinge end.




Supersedes Data Bulletin 242-81 dated 2-25-85.

October 28, 2019

© S&C Electric Company 1971-2019, all rights reserved

STATION INVERTED-STYLE MOUNTINGS

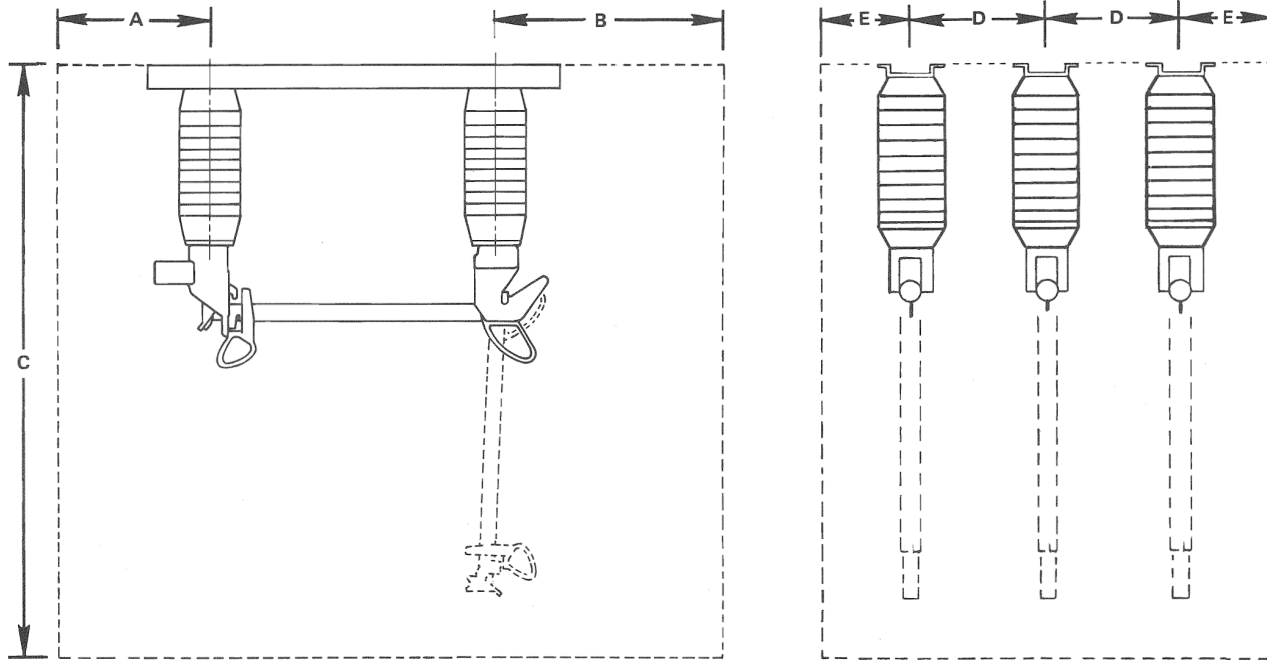

Rating				Mounting Clearances, Inches (mm)						
kV			Amperes, Max	A	B ^①	B ^②	C	D ^③	D ^④	E
Nominal	Max.	BIL								
14.4	17	110	200E or 200K	12 (305)	26½ (673)	29 (737)	43½ (1105)	17 (432)	19 (483)	14 (356)
25	27	150	200E or 200K	16 (406)	34 (864)	37½ (953)	55 (1397)	20 (508)	23 (584)	17 (432)
34.5	38	200	200E or 200K	20½ (521)	44 (1118)	47½ (1207)	69 (1753)	25 (635)	28 (711)	22 (559)


① Clearance to grounded objects when the source is connected to the main-contact end.

② Clearance to other phases or a low-voltage bus when the source is connected to the main-contact end or clearance to grounded objects or other phases when the source is connected to the hinge end.

③ Phase spacing when the source is connected to the main-contact end.

④ Phase spacing when the source is connected to the hinge end.

STATION RIGHT-ANGLE STYLE MOUNTINGS

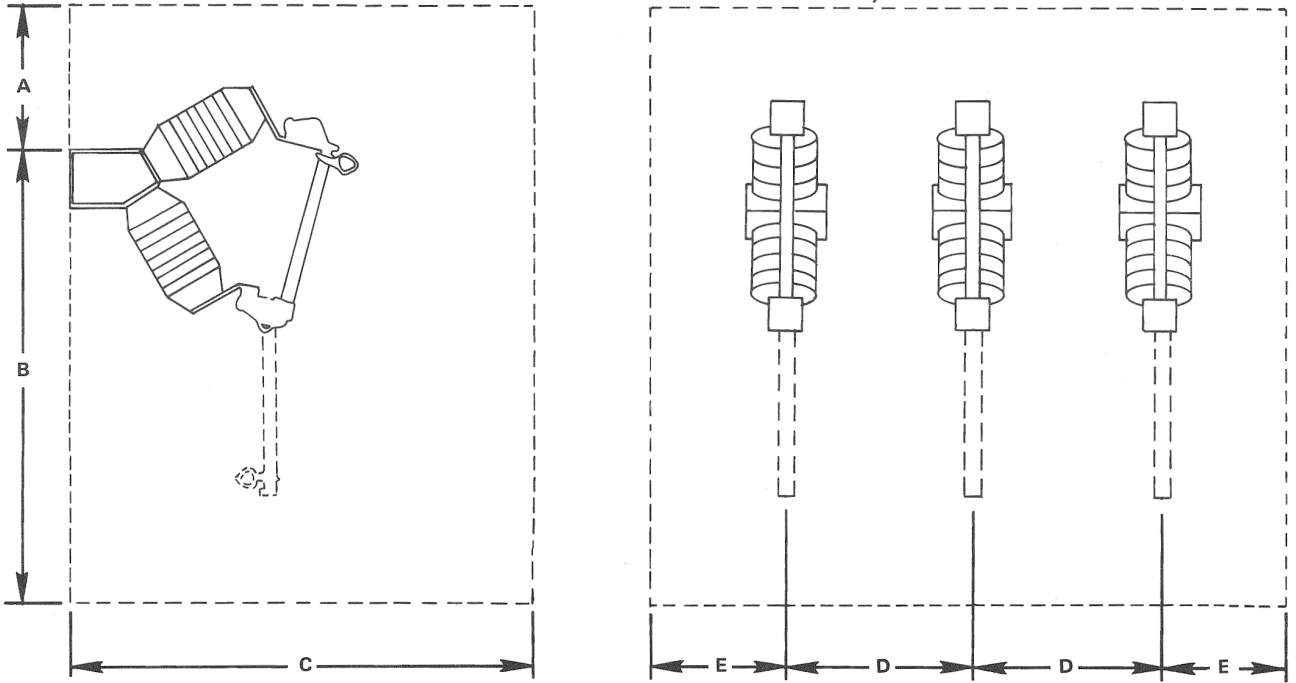

Rating				Mounting Clearances, Inches (mm)						
kV			Amperes, Max	A	B ^①	B ^②	C	D ^③	D ^④	E
Nominal	Max.	BIL								
14.4	17	110	200E or 200K	14 (357)	42 (1067)	49 (1245)	44 (1118)	17 (432)	19 (483)	14 (356)
25	27	150	200E or 200K	20 (508)	52 (1321)	60 (1524)	57 (1448)	20 (508)	23 (584)	17 (432)
34.5	38	200	200E or 200K	26 (660)	75 (1905)	83 (2108)	76 (1930)	25 (635)	28 (711)	22 (559)

① Clearance to grounded objects when the source is connected to the main-contact end.


② Clearance to other phases or a low-voltage bus when the source is connected to the main-contact end or clearance to grounded objects or other phases when the source is connected to the hinge end.

③ Phase spacing when the source is connected to the main-contact end.


④ Phase spacing when the source is connected to the hinge end.

OVERHEAD POLE-TOP STYLE MOUNTINGS

14.4 kV and 25 kV

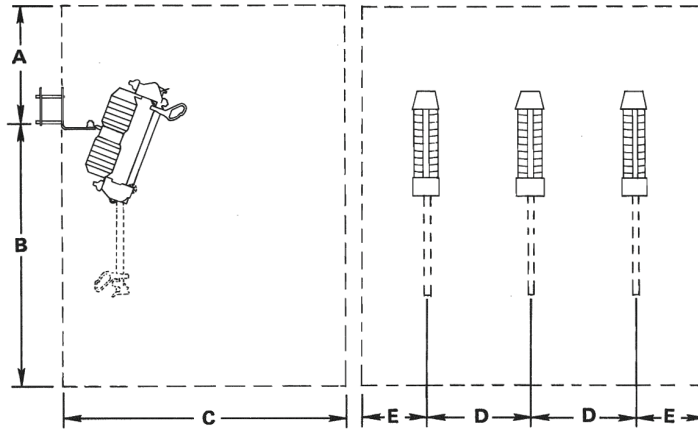

34.5 kV only

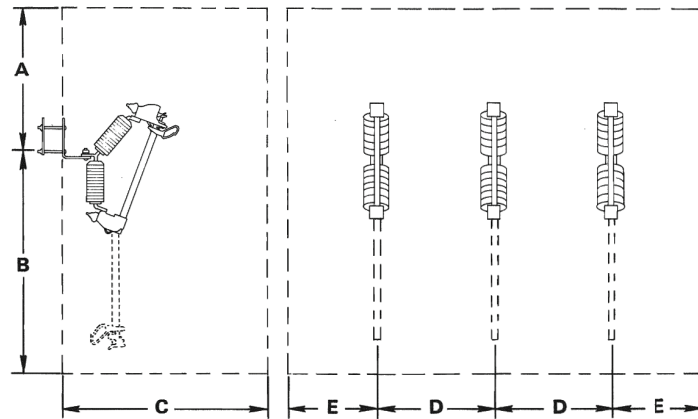

Rating				Mounting Clearances, Inches (mm)						
kV			Amperes, Max	A	B ^①	B ^②	C	D ^③	D ^④	E
Nominal	Max.	BIL								
14.4	17	110	200E or 200K	14 (356)	38 (965)	39 (991)	36 (914)	15 (381)	19 (483)	12 (305)
14.4	17	150	200E or 200K	14 (356)	38 (965)	40 (1016)	38 (965)	15 (381)	19 (483)	12 (305)
25	27	150	200E or 200K	19 (483)	46 (1168)	49 (1245)	41 (1041)	18 (457)	23 (584)	15 (381)
34.5	38	200	200E or 200K	26½ (673)	61½ (1562)	64½ (1638)	53½ (1359)	25 (635)	28 (711)	22 (559)

① Clearance to grounded objects when the source is connected to the main-contact end.

② Clearance to other phases or a low-voltage bus when the source is connected to the main-contact end or clearance to grounded objects or other phases when the source is connected to the hinge end.

③ Phase spacing when the source is connected to the main-contact end.

④ Phase spacing when the source is connected to the hinge end.